LEICA S

Quickstart guide

TABLE OF CONTENTS

CHARGE BATTERY 04
INSERT BATTERY 04
INSERT MEMORY CARD 05
MOUNT & UNMOUNT LENS 05
OPERATION ELEMENTS 06
INTERFACES 07
BOTTOM VIEW 07
VIEWFINDER 08
STATUS SCREEN 09
TOP DISPLAY 10
SWITCH ON CAMERA 11
TAKING PHOTOS 11
ENTER STATUS SCREEN & PLAY MODE 12
ENTER MENU & PLAY MODE 12
MENU 13
MENU - QUICK ACCESS 14
BASIC CAMERA SETUP 15
PLAYMODE - BROWSE 17
PLAYMODE - ZOOM 18
PLAYMODE - SCREENS 19
PLAYMODE - QUICK 100% ZOOM 20
EXPOSURE MODE M, T 21
EXPOSURE MODE A, P 22
B - BULB MODE / BULB PRESET 23
TETHERED SHOOTING - ADOBE™ PHOTOSHOP™ LIGHTROOM™ WORFLOW 24
TETHERED SHOOTING - LEICA IMAGE SHUTTLE™ WORKFLOW 26
MENU LIST 27

CHARGE BATTERY

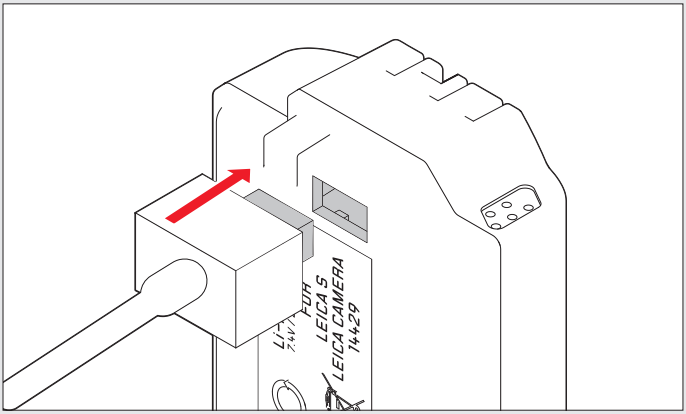

INSERT BATTERY

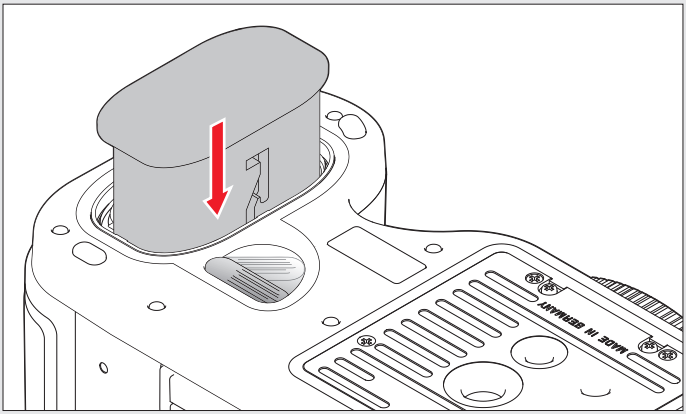

INSERT MEMORY CARD

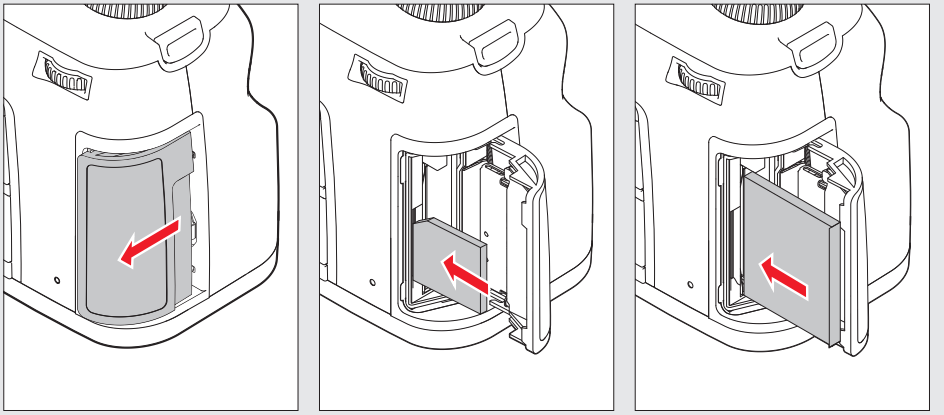

MOUNT & UNMOUNT LENS

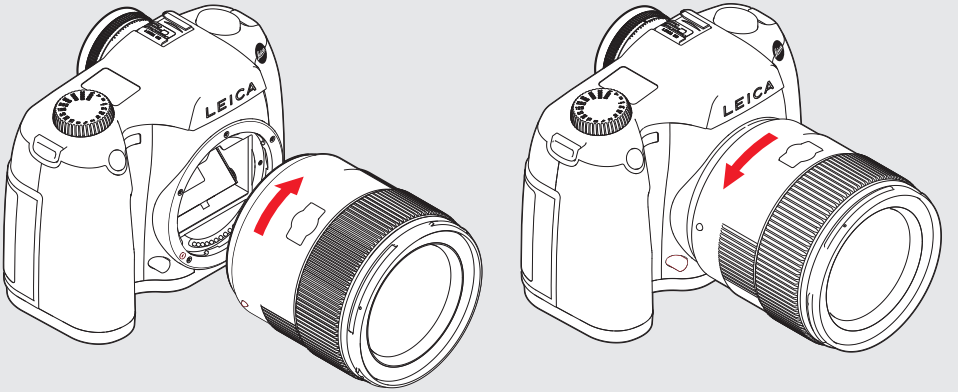

OPERATION ELEMENTS

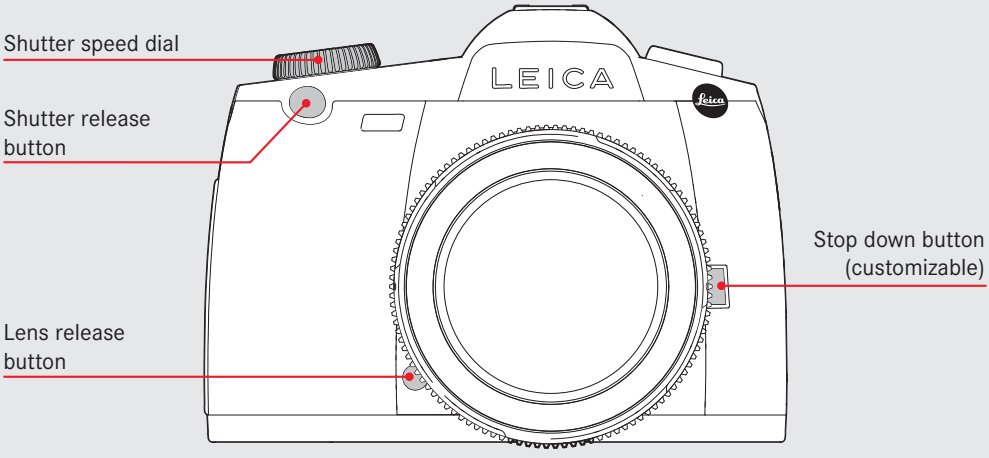

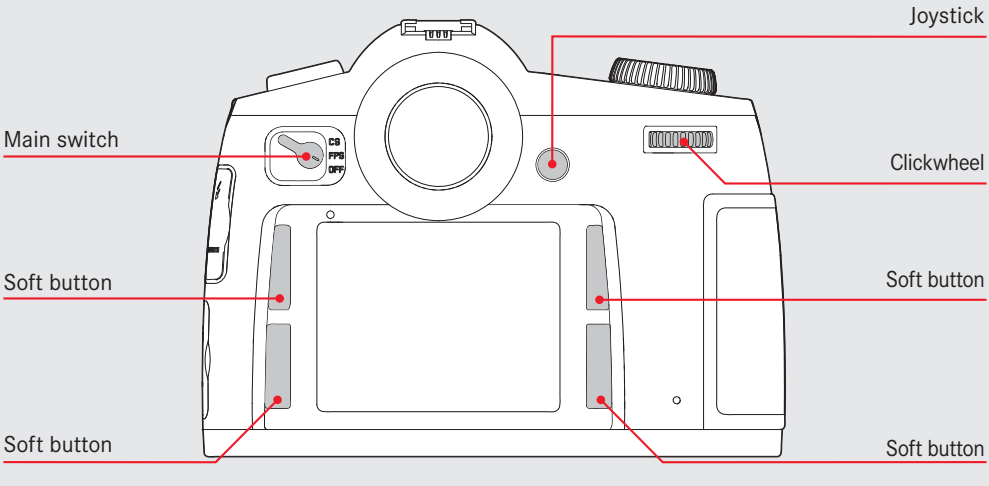

INTERFACES

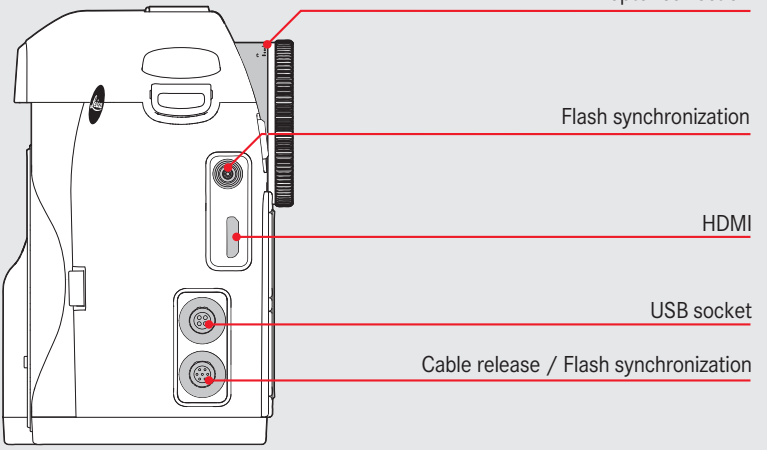

BOTTOM VIEW

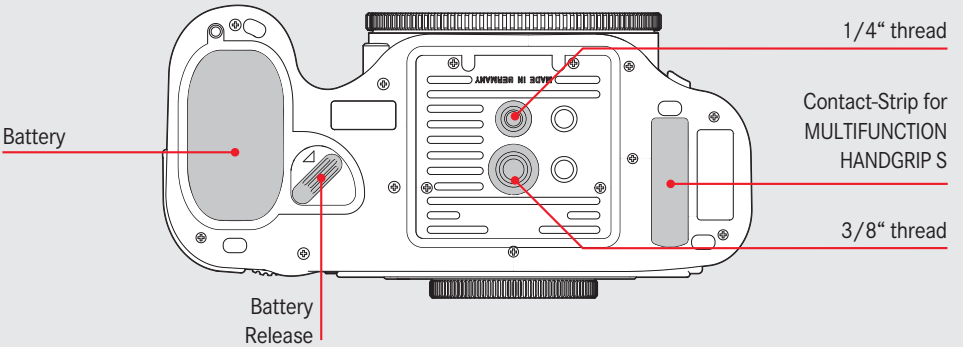

VIEWFINDER

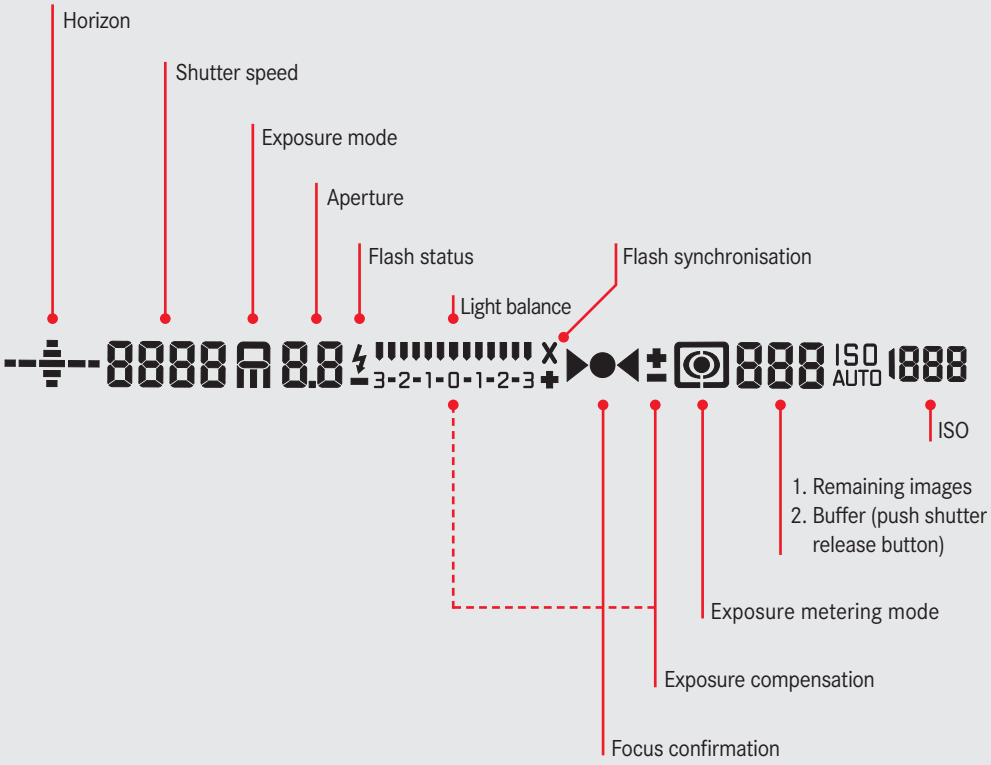

Exposure mode:

- P : Automatic program
- : Aperture priority
- T : Shutter speed priority
- m : Manual exposure

Exp. Metering Mode:

- : Multi-field
- : Center-weighted
- : Spot

STATUS SCREEN

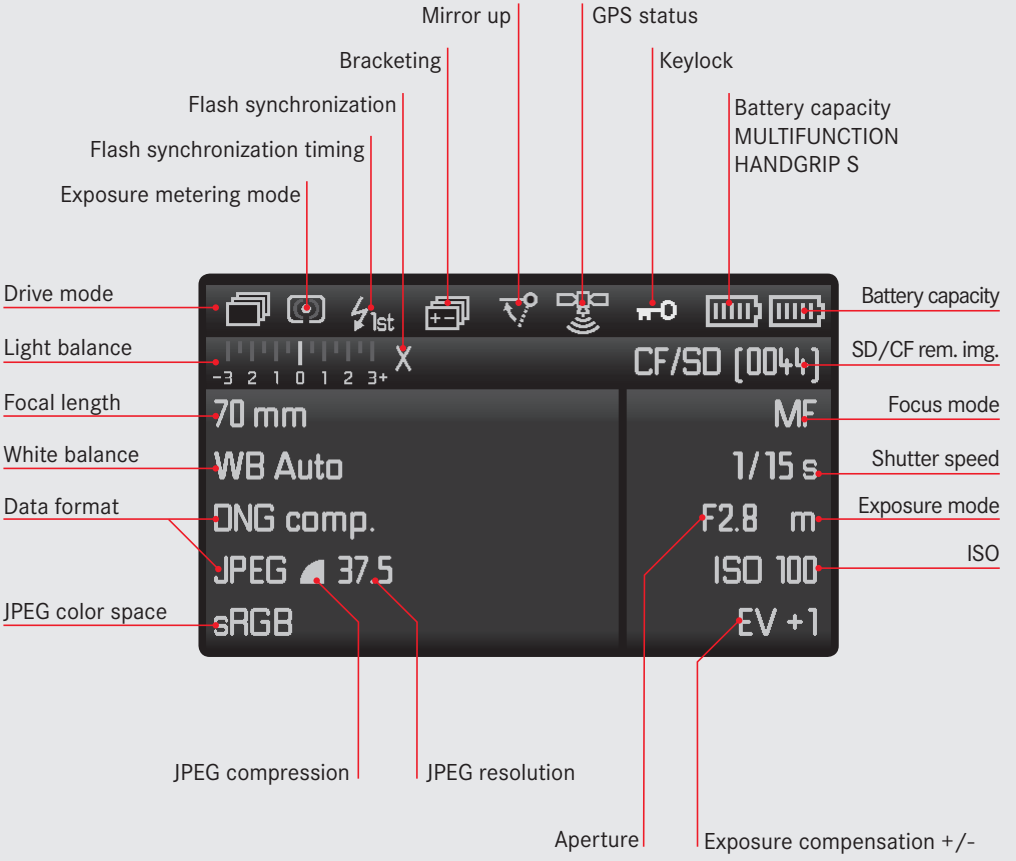

DNG comp. : DNG Compression

WB Auto : White Balance

: Drive Mode - Single

: Drive Mode - Continuous

12 : Drive Mode - Selftimer

: GPS switched on

: GPS low signal

: GPS switched off

TOP DISPLAY

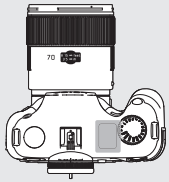

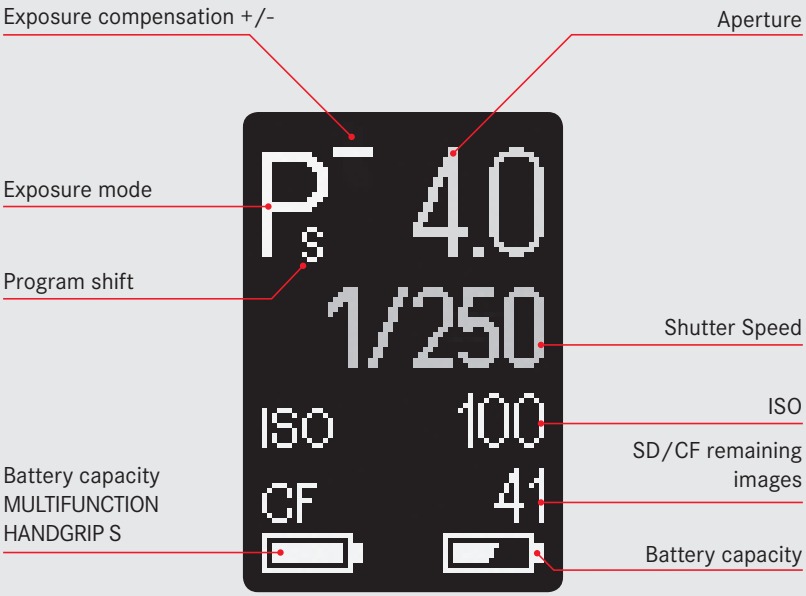
Exposure compensation +/-
Aperture
Exposure mode
Program shift
Shutter Speed
ISO
SD/CF remaining images
Battery capacity MULTIFUNCTION HANDGRIP S
Battery capacity
P
S
4.0
1/250
ISO
100
CF
41

SWITCH ON CAMERA

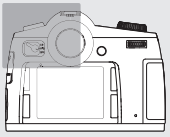

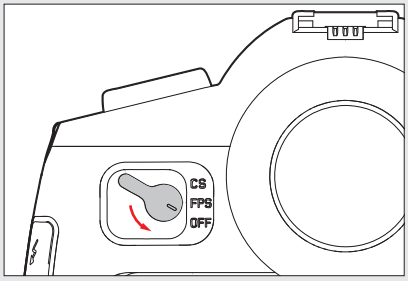

Main switch		Shutter speed	Flash sync	Flash ϟ
FPS	Focal plane shutter	125s to 1/4000s	up to 1/125s	1/125s
CS	Central shutter	8s to 1/1000s	up to 1/1000s	1/1000s

TIP
After booting, the camera will be in Record Mode. Most sequences of this Quick Start Guide will begin in this state.

TAKING PHOTOS

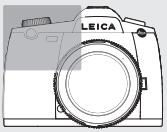

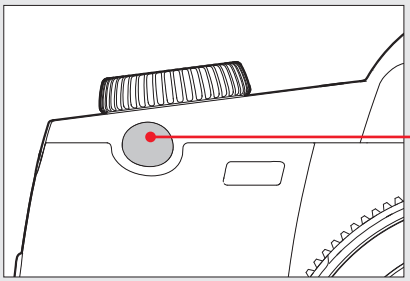

Three Way Shutter Release

1. Stop: AF lock / AE activation
2. Stop: AE lock
3. Stop: Release Shutter

TIP
Press the shutter release button halfway to exit menus and return to Record mode.

ENTER STATUS SCREEN & PLAY MODE

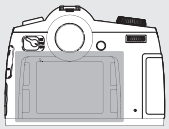

Status Screen

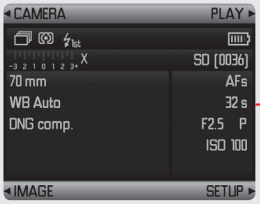

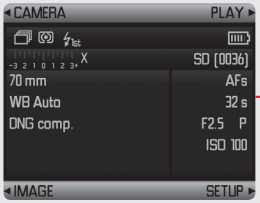

Status Screen

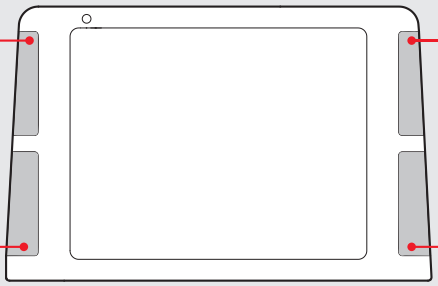

Play Mode

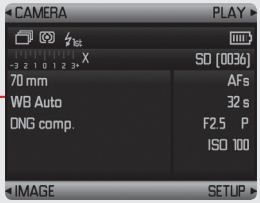

Play Mode

ENTER MENU & PLAY MODE

Section CAMERA

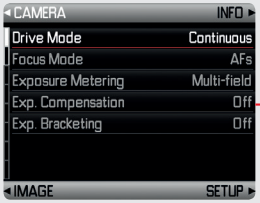

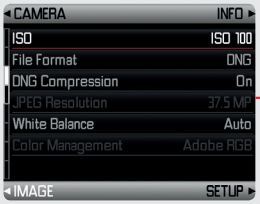

Section **IMAGE**

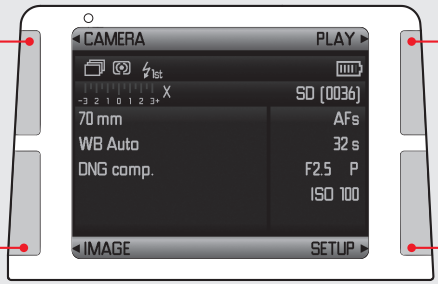

Play Mode

Section **SETUP**

MENU

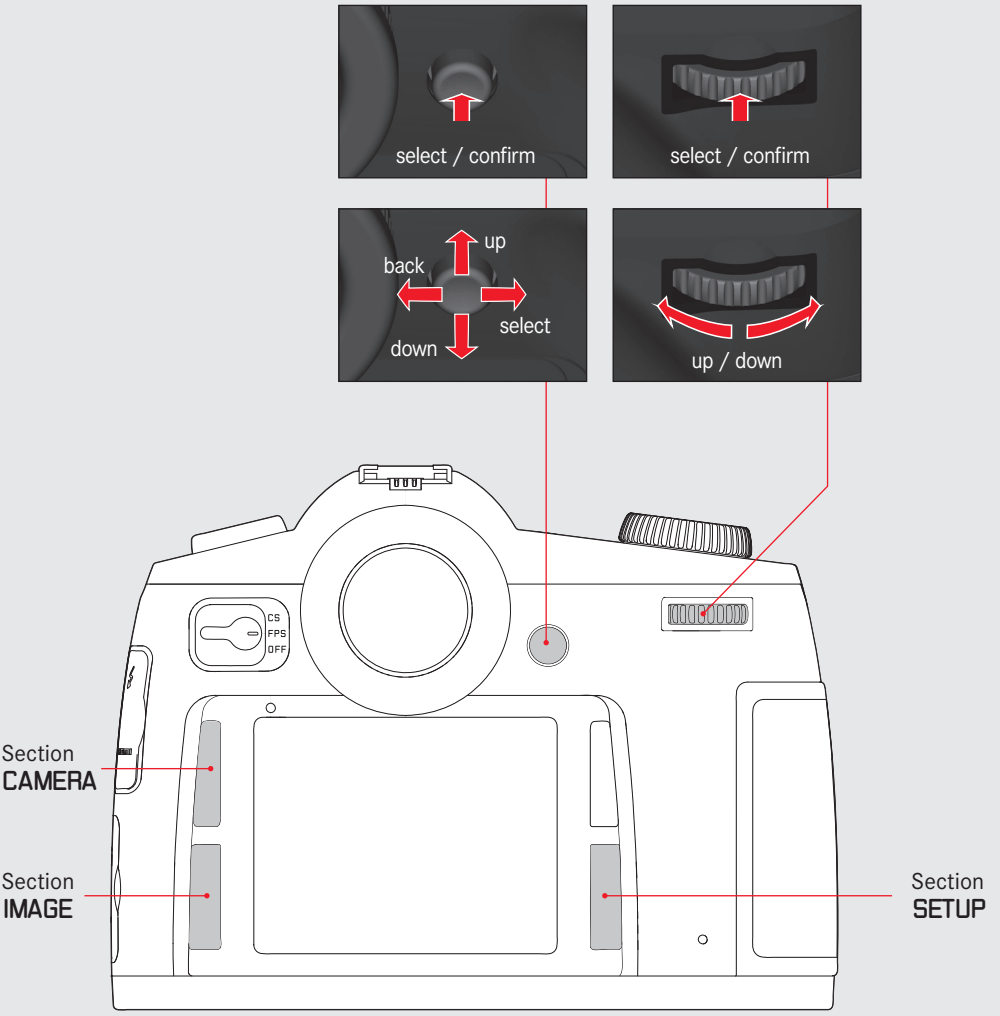

TIP

Press the shutter release button halfway to exit menus and return to Record mode.

MENU - QUICK ACCESS

Long push (1 sec.) leads you straight to your favorite submenu.

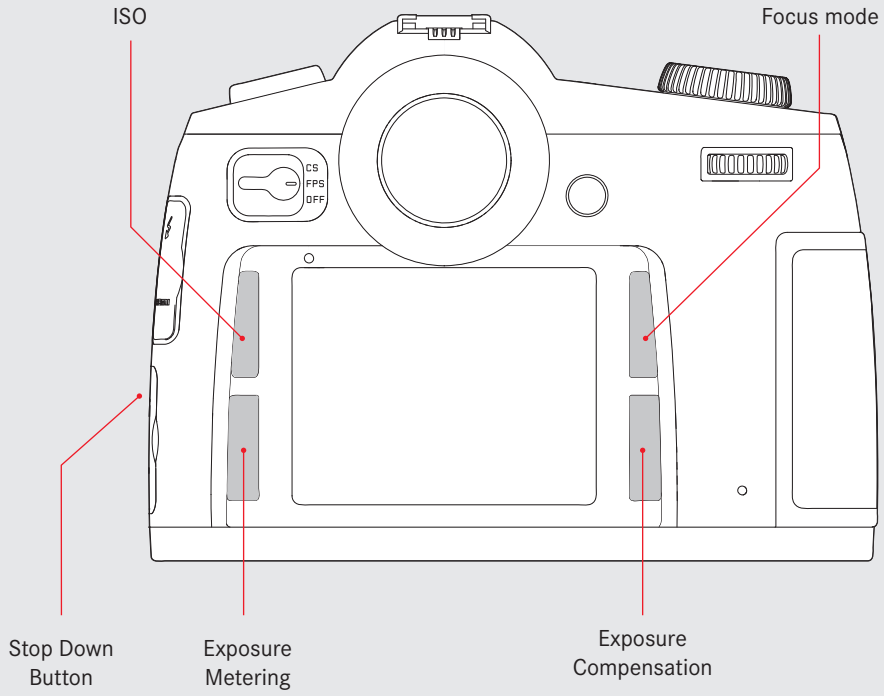

TIP

Setup the buttons to your needs in the submenu CUSTOM FUNCTIONS.

BASIC CAMERA SETUP

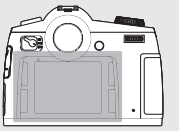

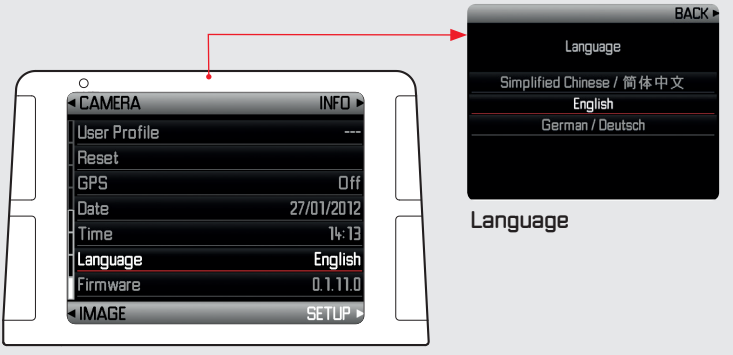

Language

MENU / **SETUP** (4. PAGE)

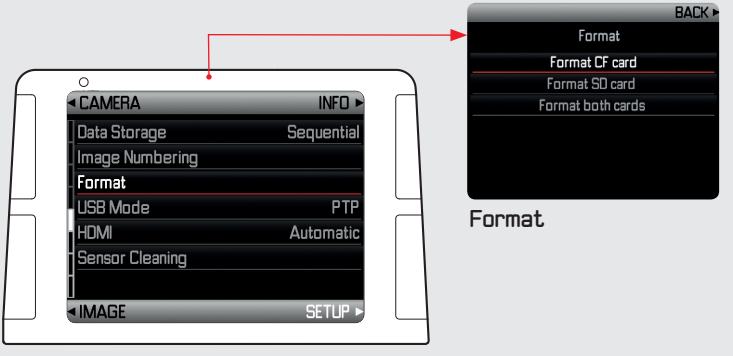

Format

MENU / **SETUP** (1. PAGE)

BASIC CAMERA SETUP

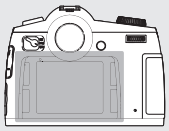

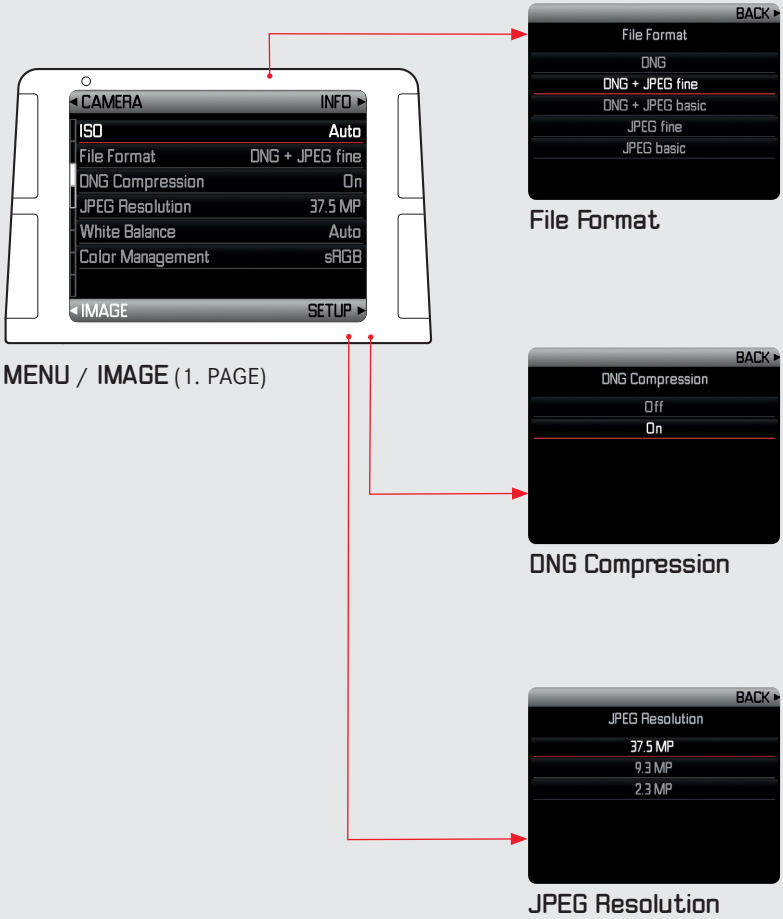

MENU / IMAGE (1. PAGE)

TIP

To save DNG + JPEG on separate cards, set DATA STORAGE to PARALLEL.
DNG Compression will speed up the tethered shooting. Compression is lossless.

PLAYMODE - BROWSE

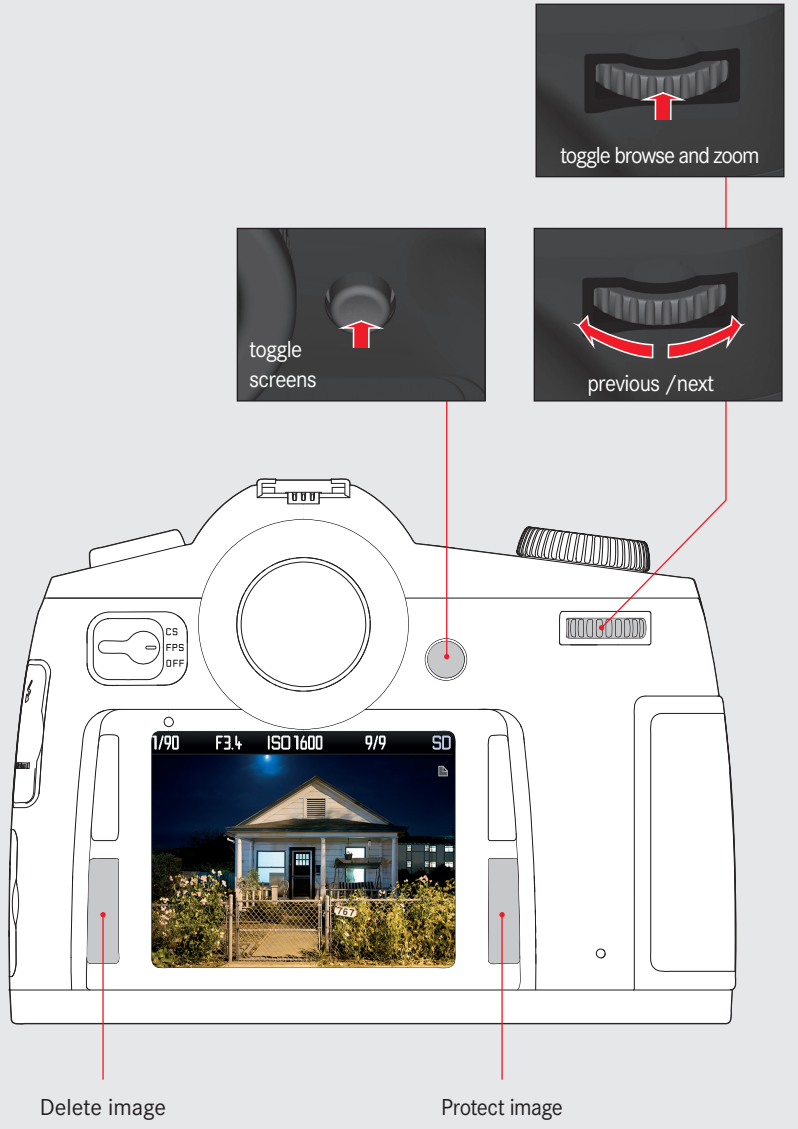

PLAYMODE - ZOOM

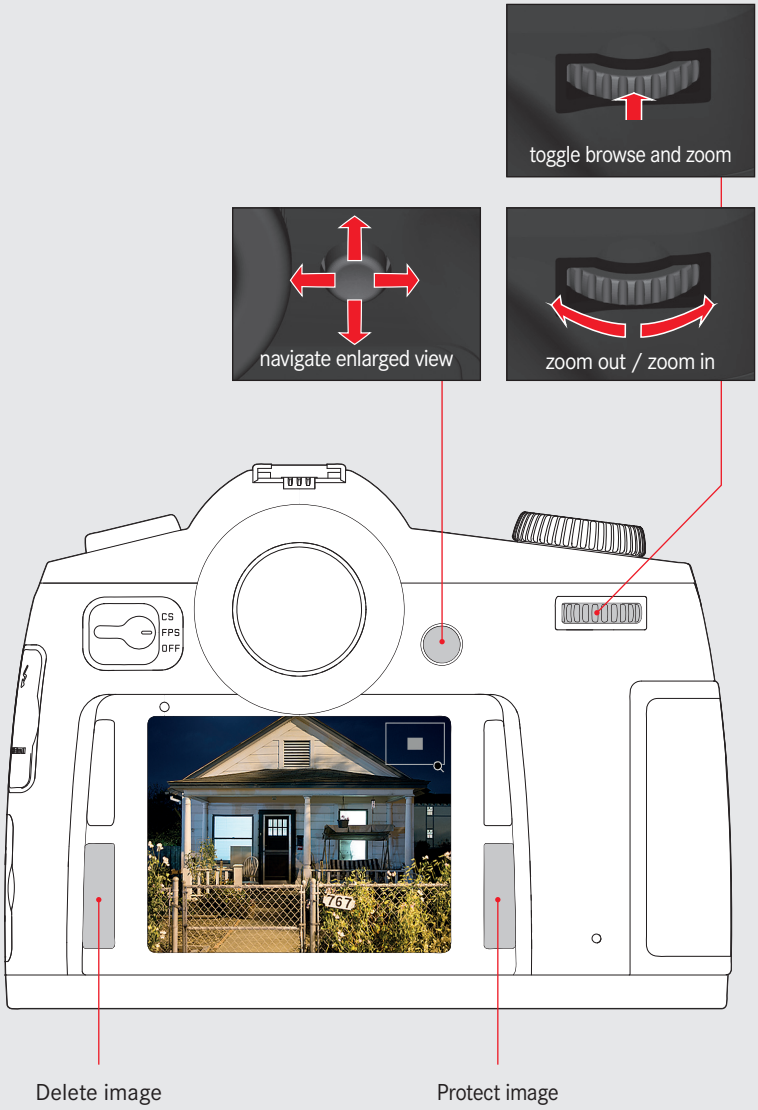

PLAYMODE - SCREENS

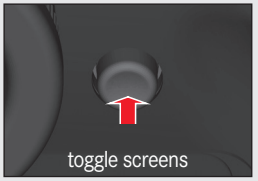

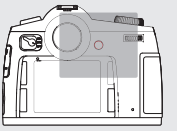

TIP

Camera always shows the latest mode after coming back to **Play** Mode. Histogram represents the visible area of the image. Customize the clipping settings under menu **CLIPPING DEFINITION**.

PLAYMODE - QUICK 100% ZOOM

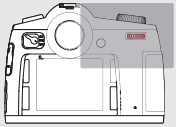

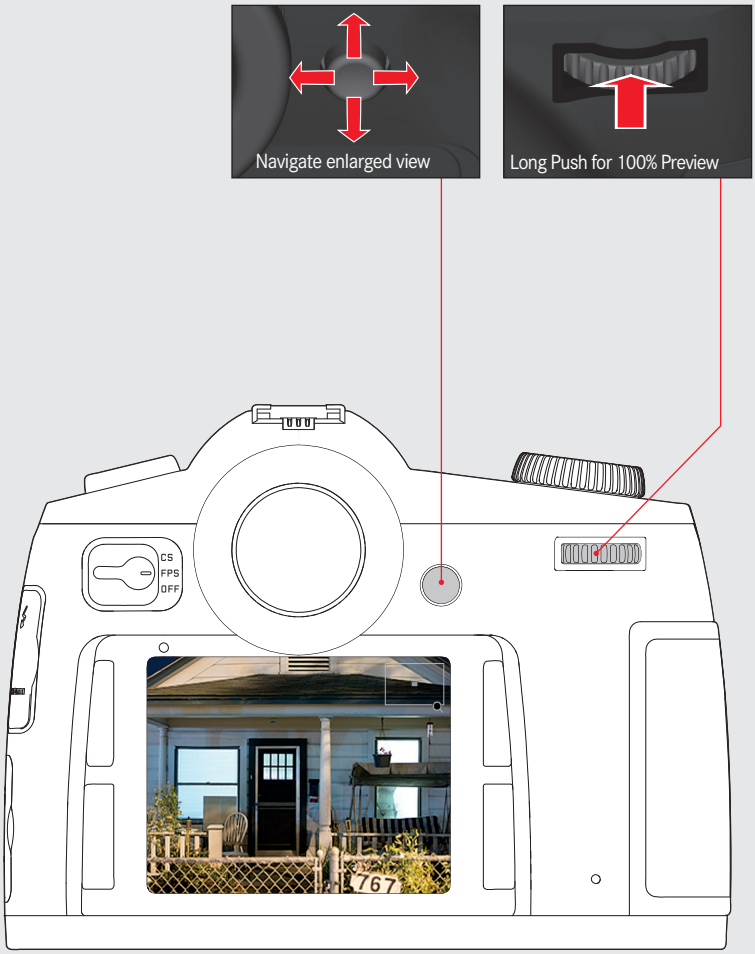

EXPOSURE MODE M, T

Set the shutter speed dial to any time, e.g. 1/125.

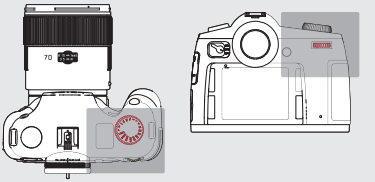

Manual

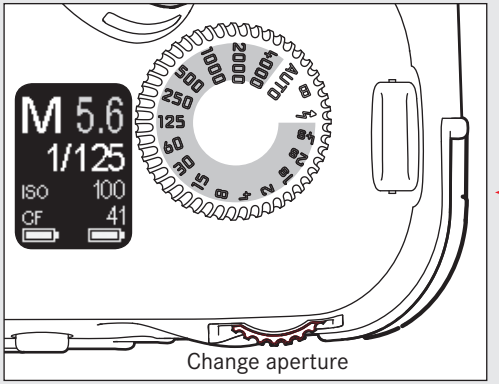

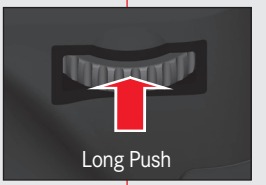

Time priority

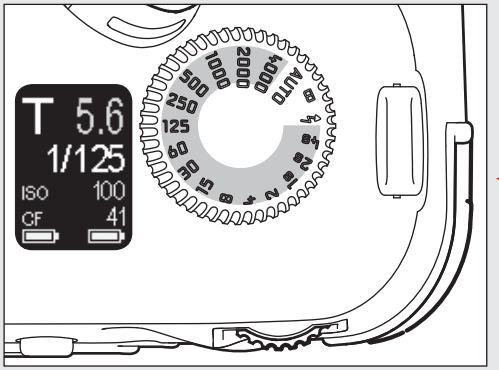

EXPOSURE MODE A, P

Set the shutter speed dial to A.

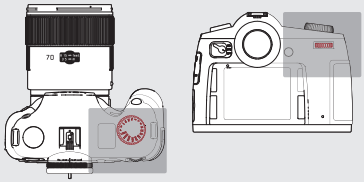

Aperture priority

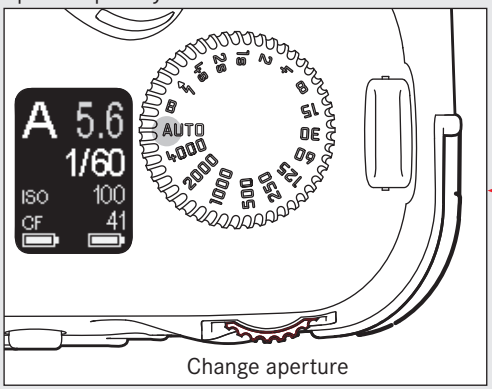

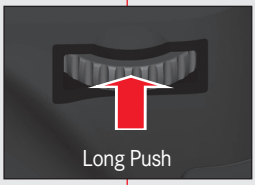

Program Automatic

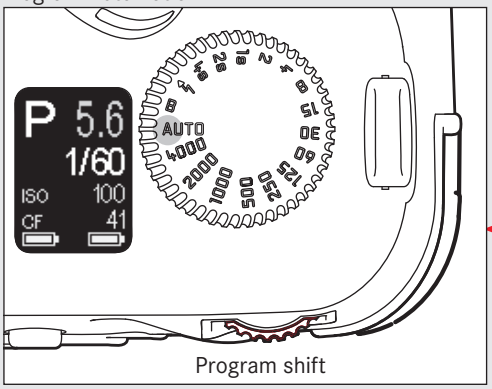

B - BULB MODE / BULB PRESET

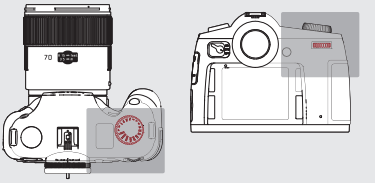

Bulb mode

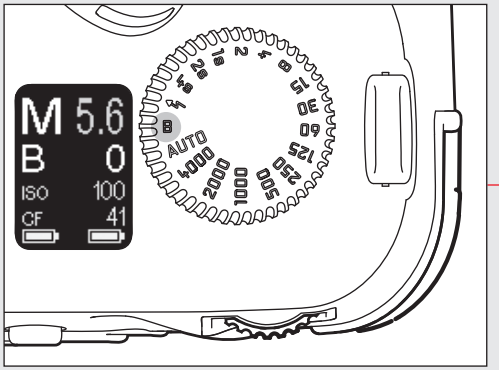

Bulb preset mode

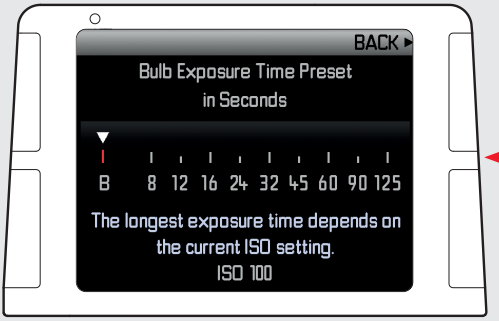
BACK
Bulb Exposure Time Preset
in Seconds
B 8 12 16 24 32 45 60 90 125
The longest exposure time depends on
the current ISO setting.
ISO 100

TETHERED SHOOTING - ADOBE™ PHOTOSHOP™ LIGHTROOM™ WORFLOW

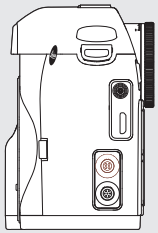

1. Connect the camera with your computer via USB cable.
2. Switch the camera on.
3. Start Adobe™ Photoshop™ Lightroom™.
4. Setup tethered shooting.

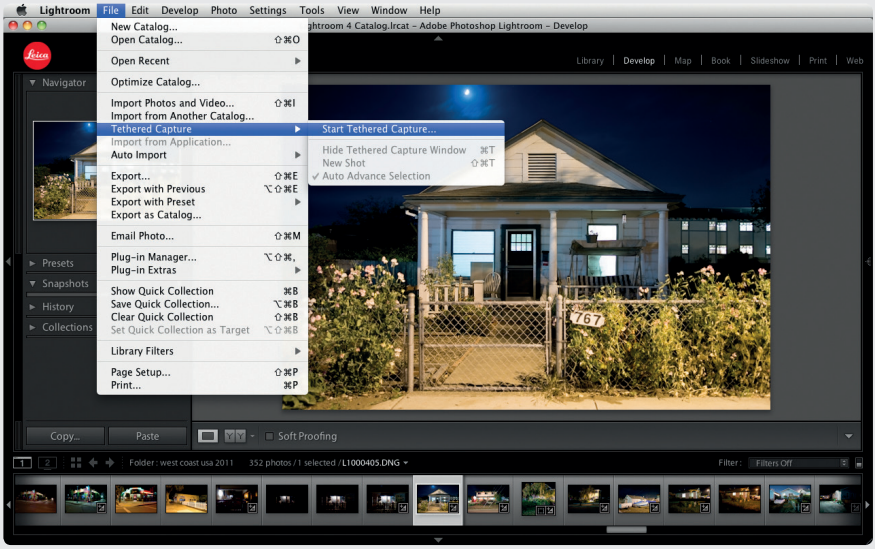

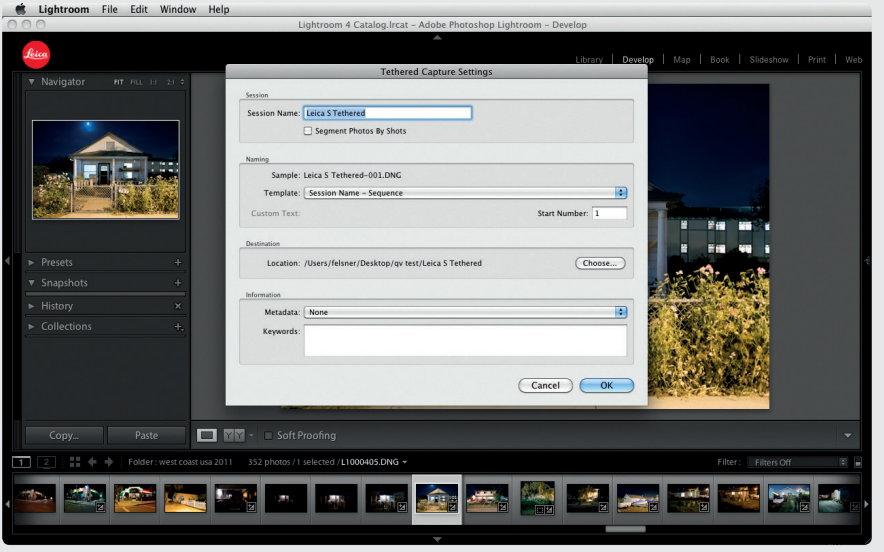
Lightroom File Edit Window Help
Lightroom 4 Catalog.lrcat – Adobe Photoshop Lightroom – Develop
Library | Develop | Map | Book | Slideshow | Print | Web
Navigator
Tethered Capture Settings
Session
Session Name: Leica S Tethered
Segment Photos By Shots
Naming
Sample: Leica S Tethered-001.DNG
Template: Session Name – Sequence
Custom Text:
Start Number: 1
Destination
Location: /Users/felsner/Desktop/qv test/Leica S Tethered
Choose...
Information
Metadata: None
Keywords:
Cancel
OK
Presets
Snapshots
History
Collections
Copy...
Paste
Soft Proofing
Folder : west coast usa 2011
352 photos / 1 selected /L1000405.DNG
Filter :
Filters Off

Lightroom File Edit Develop Photo Settings Tools View Window Help
Lightroom 4 Catalog.lrcat – Adobe Photoshop Lightroom – Develop
Library | Develop | Map | Book | Slideshow | Print | Web
Navigator
S Digital SLR Camera
Leica S Tethered
sec Auto
f / 2.5
ISO Auto
WB: Auto
Develop Settings :
Same as previous
Presets
Snapshots
History
Collections
Copy...
Paste
Soft Proofing
Folder : west coast usa 2011
352 photos / 1 selected /L1000405.DNG
Filter :
Filters Off

TETHERED SHOOTING - LEICA IMAGE SHUTTLE™ WORKFLOW

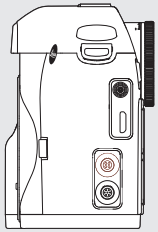

1. Connect the camera with your computer via USB cable (PTP storage mode).
2. Switch the camera on.
3. Start Leica Image Shuttle™.
4. Setup tethered shooting.

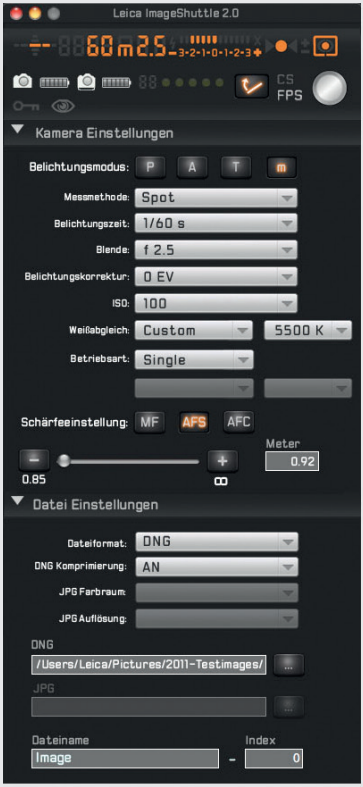

TIP

You can also use Leica Image Shuttle in combination with Adobe Bridge or with the hotfolder function of Adobe PS Lightroom.

MENU LIST

CAMERA	▪ DRIVE MODE	▸ SINGLE / CONTINUOUS / SELFTIMER 2s / 12s
	▪ FOCUS MODE	▸ AFs / AFc / MF
	▪ EXPMETERING	▸ MULTIFIELD / CENTER / SPOT
	▪ EXPCOMPENTSATION	▸ +/- 3 EV
	▪ EXPBRACKETING	
	▪ AUTO SLOW SYNC	
	▪ FLASH SYNC MODE	
	▪ MIRROR UP MODE	
IMAGE	▪ ISO	▸ 100 / 200 / 400 / 800 / 1600 / 3200
	▪ FILE FORMAT	▸ DNG / JPG / DNG+JPG
	▪ DNG COMPRESSION	
	▪ JPEG RESOLUTION	▸ 37.5 / 9.3 / 2.3
	▪ WHITE BALANCE	▸ PRESETS / GREYCARD / COLOR TEMP
	▪ COLOR MANAGEMENT	▸ sRGB / ADOBE RGB / ECI 2.0
	▪ CONTRAST	
	▪ SHARPNESS	
	▪ SATURATION	
SETUP	▪ DATA STORAGE	▸ SEQUENTIAL / PARALLEL / EXTERNAL
	▪ IMAGE NUMBERING	
	▪ FORMAT	
	▪ USB MODE	▸ MASS STORAGE / PTP
	▪ HDMI	
	▪ SENSOR CLEANING	
	▪ AUTO REVIEW	▸ DURATION / HISTOGRAM / CLIPPING
	▪ HISTOGRAM	▸ STANDARD / RGB
	▪ CLIPPING DEFINITION	
	▪ MONITOR DISPLAY	
	▪ AUTO POWER OFF	
	▪ ACUSTIC SIGNAL	
	▪ HORIZON	
	▪ CUSTOM FUNCTIONS	
	▪ AE- AF-LOCK	
	▪ KEY LOCK	
	▪ CLICK WHEEL EXPMODE	
	▪ USER PROFILE	
	▪ RESET	
	▪ GPS	
	▪ DATE	
	▪ TIME	
	▪ LANGUAGE	
	▪ FIRMWARE	

my point of view

Leica Camera AG | Am Leitz-Park 5 | 35578 Wetzlar | DEUTSCHLAND
Telefon +49(0)6441-2080-0 | Telefax +49(0)6441-2080-333 | www.leica-camera.com

93 422 IX/13/LW/B